


Some framing requirements such as erection bracing and blocking panels have been omitted for clarity. Refer to Dindas Australia Technical Bulletin series for further information on bracing and safe temporary load details.

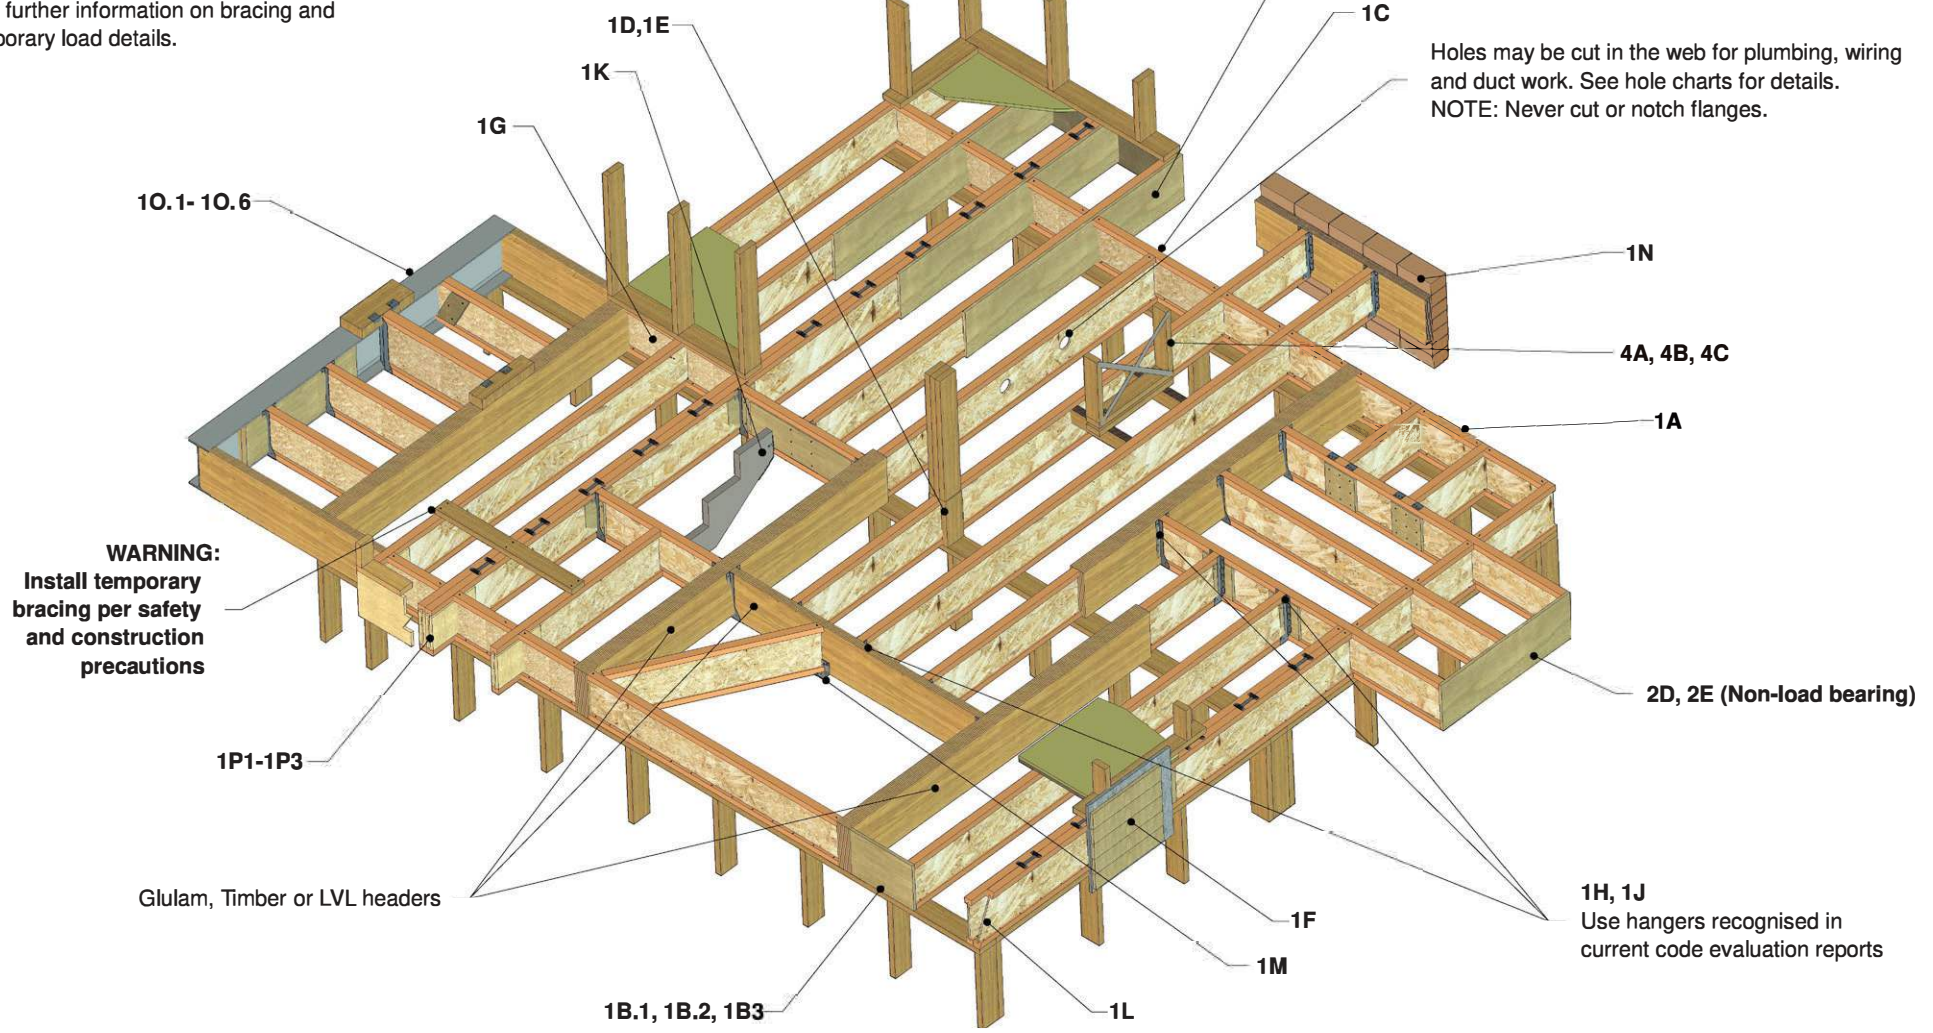

WARNING:
Install temporary bracing per safety and construction precautions

Holes may be cut in the web for plumbing, wiring and duct work. See hole charts for details.
NOTE: Never cut or notch flanges.

See next page for floor framing construction notes

<p><i>your partner for engineered timber solutions</i></p>	DATE CREATED: 28/07/2020	TITLE: TYPICAL FLOOR FRAMING AND CONSTRUCTION DETAILS	<p>NOTES:</p> <ol style="list-style-type: none"> Dimensions are in millimetres. Tolerance on all dimensions to be +/- 0.5mm unless noted otherwise. Written dimensions take precedence over scaled dimensions. 	<p>Private Confidential & Copyright This drawing is the exclusive property of Dindas Australia. Copyright & all rights reserved. You hereby agree and undertake that you will not in anyway utilize, copy reproduce or take advantage of the drawing (or any part thereof) and disclose any information to other parties without the written consent of Dindas Australia.</p>	SIZE A4
	DRAWN BY: B.S				SCALE N.T.S
	CHECKED BY: --				
DWG REV: --					